

Telescopic Glide Shelf Guides Accessories



910861

For range cooker with all electric cavities, this allows you to slide out the shelf fully and safely, very useful when taking baking out of the oven, or for checking or turning hot food. Simple to install, the action is smooth and easy.

Specifications

Features

Family	telescopic shelves
--------	--------------------

Product	cookers
---------	---------
